


# Technical Note


## Firmware update feature in PIX Connect

Starting from version **2.15.2219.0** the PIX Connect software has an integrated PI/Xi firmware update feature.


Please connect the PI/Xi camera to your PC and start PIX Connect. The computer needs an internet connection. Go to the menu: **Tools/ Extended/ Update firmware**

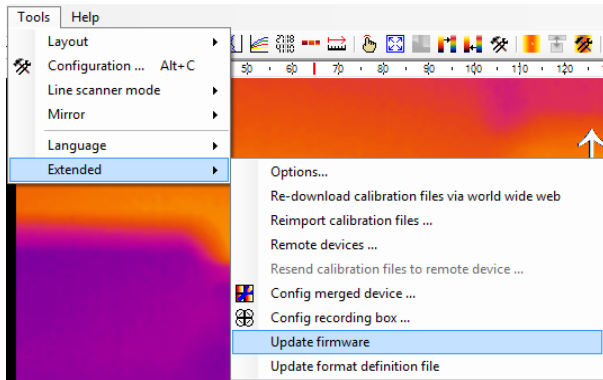



The PIX Connect is looking via the internet if for the connected PI/Xi camera a newer firmware version is available. If your camera has the latest firmware, you will get this message <sup>1)</sup>:

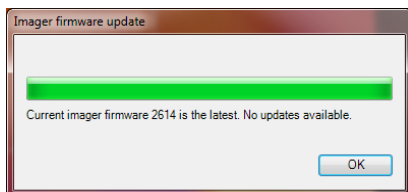

If an update for your PI/Xi camera is available you will get a message like this:

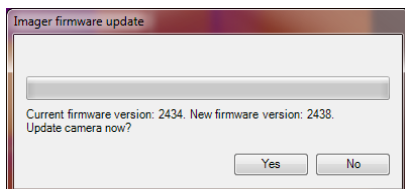

Press **Yes** if you want to start the update process. The following messages will appear:

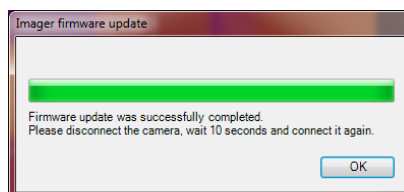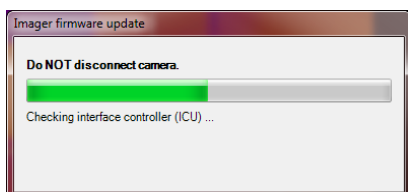


After a successful update of the firmware please **disconnect** the PI/Xi **and reconnect** to your computer after 10 seconds.

<sup>1)</sup> This message also appears if your PI/Xi camera cannot be updated to the latest firmware because of a too old PI/Xi hardware. If you have questions related to firmware versions and updates please contact our service department for further assistance.


## Technical Note

Beside the firmware also the Format definition file (Formats.def) can be updated through PIX Connect now. This file contains the definition of the video formats for all PI/Xi cameras. A new PIX Connect release always comes with the latest formats definition file, but in case a video format is added or changed it can be updated now independent of new PIX Connect releases.


Go to the menu: **Tools/ Extended/ Update format definition file**

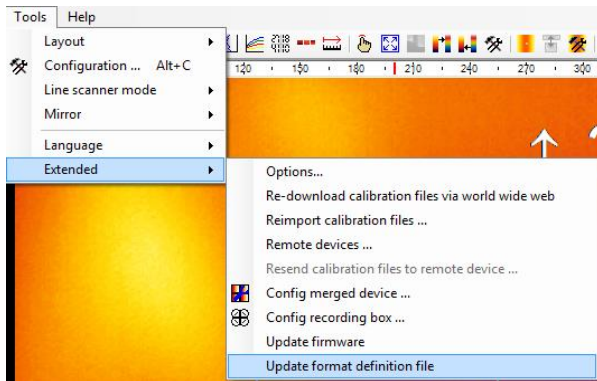

The file *Formats.def* will be downloaded and updated in the program folder of your PIX Connect installation automatically now:

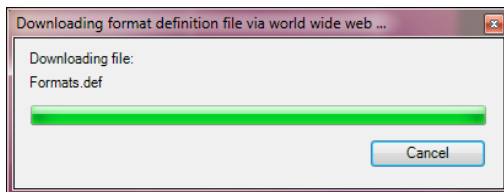

After firmware update and/ or update of *Formats.def* you can check the current versions if you open the menu: **Help/ About**

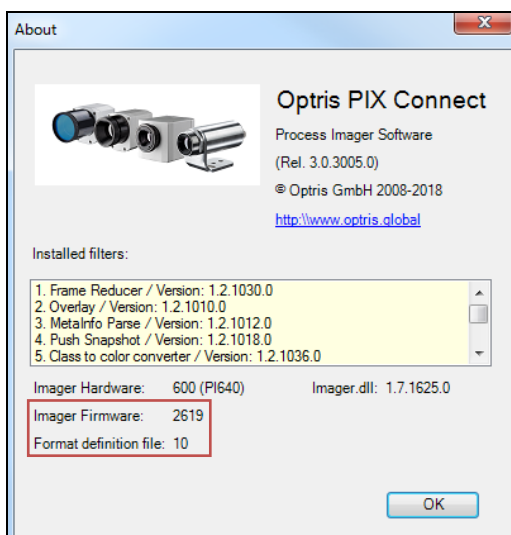

Firmware update feature in PIX Connect\_TN\_2018-01-A

**Optris GmbH**  
Ferdinand-Buisson-Str. 14  
13127 Berlin  
Germany

Tel. +49 (0)30 500 197-0  
Fax +49 (0)30 500 197-10

info@optris.com  
www.optris.com